



PAPER Calibration

1 Make sure bot is powered off, then place it in the black circle.

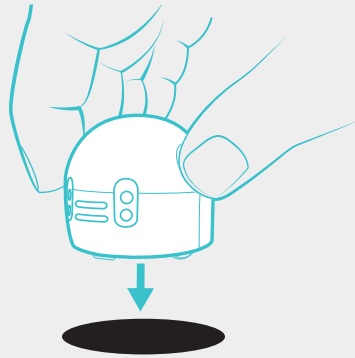


2

Press & hold bot's Power Button for 2-4 sec. until top light blinks white. Then, release Power Button.

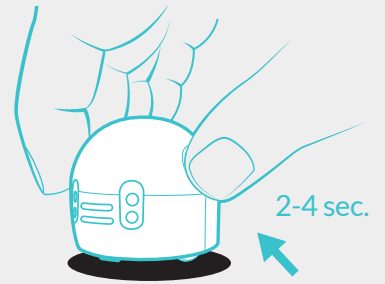


3

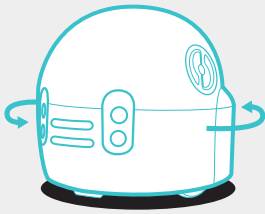

Your bot blinks green when calibrated. If bot blinks red, start over from step 1. Evo also spins during calibration.

4

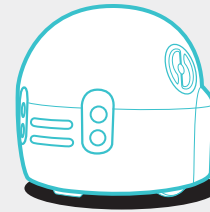

Press the Power Button to turn Bit back on. Evo powers on automatically after calibrating.

Drawing LINES



X

Too Thin!



X

Too Thick!




X

Inconsistent!




✓

Just Right



X

Too Close!

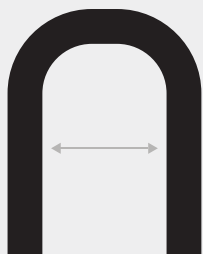

✓

Just Right



X

Too Sharp!



✓

Just Right



✓

Just Right

Drawing COLOR CODES



X
Codes on colored lines



X
Different sizes



X
White spaces



X
Overlapping colors



X
Too dark



X
Single color squares larger than 1/4"



✓
Single color squares approx 1/4"

X
Codes on black lines

MARKERS

To draw any Color Code, you will need a combination of black, red, green and blue markers.



X
Dry Erase



X
Crayons



✓




X
Colored pencil




X
Highlighter

✓
Ozobot Markers
Crayola Classic
Crayola Pastels
Sharpie Chisel Tips
(use light green and light blue)


COLOR CODE Placement

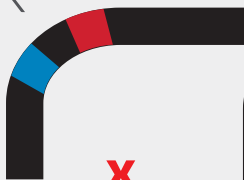


X
Codes on corners

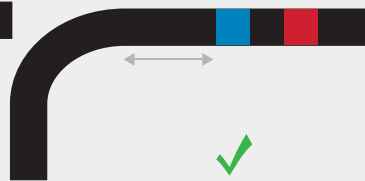

✓
Keep codes on straight lines away from corners

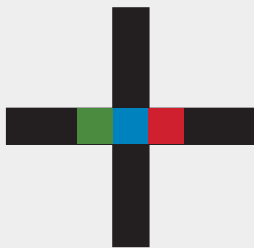

X
Too close to intersection

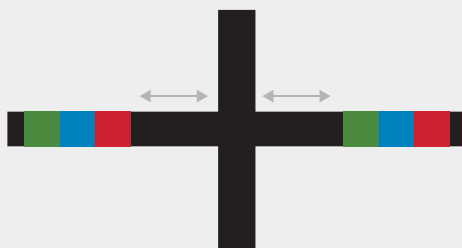

✓
Place codes away from intersections



X
Codes too close



✓
Codes at least 1" apart



✓
Two-color codes need to be at line end




✓
All other codes need black line before and after

STICKERS



X
Codes on colored lines

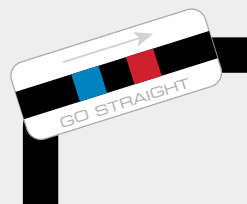


X
Codes on corners



X
Not lined up



X
Too close

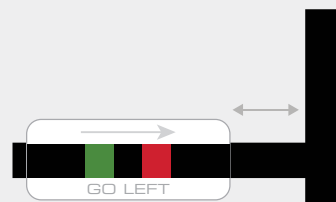

✓
Align with straight, black lines
At least 1-inch from corners, intersections, and other codes